


REMOVE NECESSARY TRIM, SEAT BACK AND CUSHION AND ROUTE WIRE ASM ON DRIVER'S SIDE AS SHOWN, TAPE AS NECESSARY.

CONNECT TO RELAY

FRONT WIRE ASM

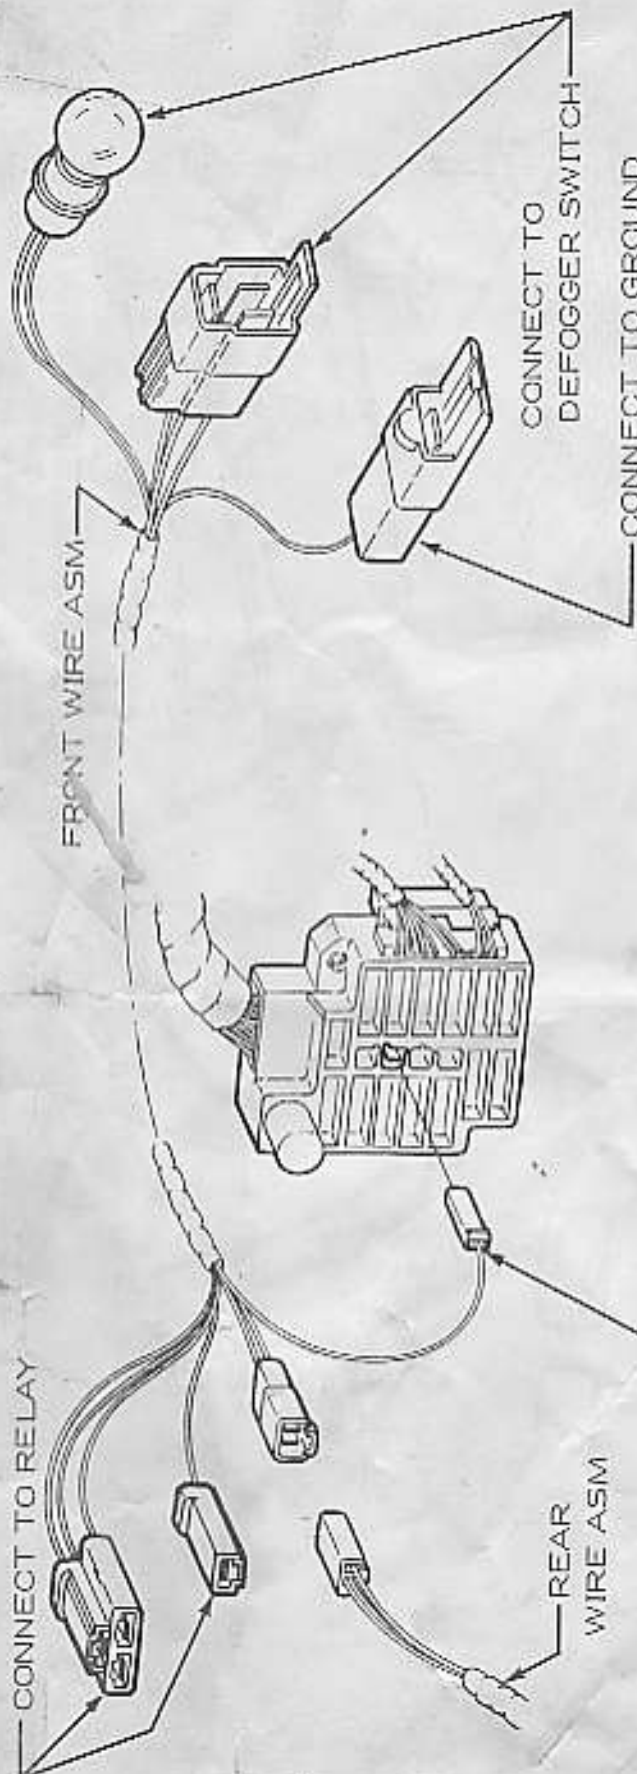

CONNECT TO  
DEFOGGER SWITCH

CONNECT TO GROUND

**CAUTION:** DO NOT ASSEMBLE GREEN WIRE INTO FUSE BLOCK UNTIL DEFOGGER INSTALLATION IS COMPLETE.

**VIEW A**